

## USER GUIDE

# NI PXIe-1075 Power Supply Shuttle

The NI PXIe-1075 power supply shuttle is a replacement part for the NI PXIe-1075 chassis.



**Caution** This power supply is not compatible with any other National Instruments chassis.

## Introduction

---

To minimize downtime caused by a power-supply failure, the NI PXIe-1075 chassis has a modular power supply shuttle. This power supply shuttle includes the chassis power supply, cooling fans, and fan-control circuitry. Key features of the power supply shuttle include:

- Universal AC input with automatic voltage and frequency ranging
- Over-current protection via push-reset circuit breaker
- Remote power monitoring and inhibit via a rear-panel connector
- Temperature-sensing module that can adjust fan speed based on air-intake temperature to minimize audible noise
- Circuitry to control a front-panel LED that indicates power supply failure

## Unpacking

---


Carefully inspect the shipping container and the power supply shuttle for damage. Check for visible damage to the metal work. Check to make sure all handles, hardware, and switches are undamaged. Visually inspect the inside of the shuttle for any possible damage, debris, or detached components. If damage appears to have been caused during shipment, file a claim with the carrier. Retain the packing material for possible inspection and/or reshipment.

# What You Need to Get Started

- ❑ NI PXIe-1075 chassis (the unit being repaired)
- ❑ NI PXIe-1075 power supply shuttle
- ❑ *Read Me First: Safety and Electromagnetic Compatibility*
- ❑ *NI PXIe-1075 User Manual* (provided with the chassis; also available at [ni.com/support](http://ni.com/support))
- ❑ #1 Phillips screwdriver

## Description

Refer to Figure 1 to locate user-accessible components on the power supply shuttle.

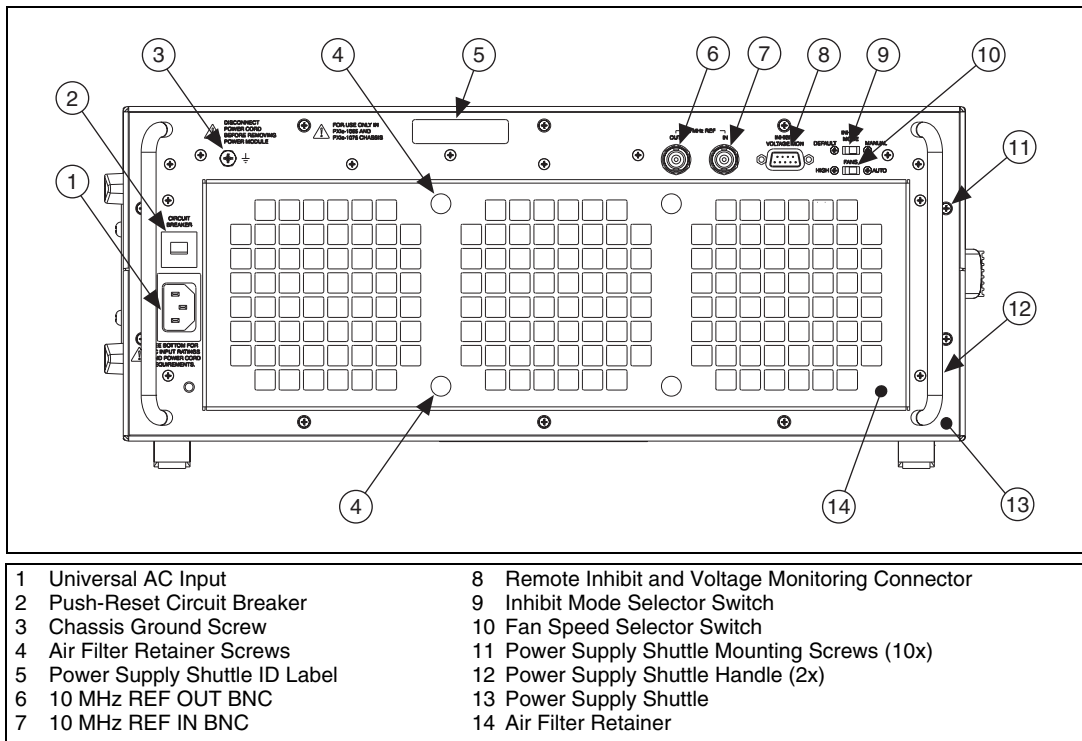

**Figure 1.** Rear View of the NI PXIe-1075 Chassis

# Installation and Maintenance

---

The information in this section is for qualified service personnel only. Read the *Read Me First: Safety and Electromagnetic Compatibility* document included with your kit before using the power supply shuttle.



**Caution** Many components within the chassis under repair are susceptible to static discharge damage. Service the chassis only in a static-free environment. Observe standard handling precautions for static-sensitive devices while servicing the chassis. Always wear a grounded wrist strap, or equivalent, while servicing the chassis.



**Caution** Always disconnect the AC power cable before cleaning or servicing the chassis.



**Caution** Never connect the AC power cable to the power supply shuttle until you install it in a chassis. Do not use, test, or configure the power supply shuttle outside of a chassis.

The power supply shuttle is a replacement part for the NI PXIe-1075 chassis. The *NI PXIe-1075 User Manual* contains all of the most up-to-date chassis service procedures, including removal and replacement of power supply shuttles. The chassis includes a hardcopy of the user manual; additionally, you can download a softcopy from [ni.com/support](http://ni.com/support).

## Removal

Before attempting to replace the power supply shuttle, verify that there is adequate clearance behind the chassis. With the chassis powered off, disconnect the power cable from the power supply shuttle on the back of the chassis. Identify the ten mounting screws that attach the power supply shuttle to the chassis. Refer to Figure 1 for the mounting screw locations. Using a Phillips screwdriver, remove the mounting screws. Pull on the two rear handles of the power supply shuttle to remove it from the back of the chassis.

## Installation

Ensure that there is no visible damage to the new power supply shuttle. Verify that the housing and connector on the new power supply shuttle have no foreign material inside. Remove the protective cap on the PXI\_CLK10 connector. Install the new power supply shuttle into the opening on the rear of the chassis. Install and tighten the ten mounting screws with a Phillips screwdriver.

## Configuration

The fan-speed selector switch is on the rear panel of the power supply shuttle. Refer to Figure 1 to locate the fan-speed selector. Select HIGH for maximum cooling performance (recommended) or AUTO for quieter operation. When set to AUTO, air-intake temperature determines the fan speed.



**Note** The power supply shuttle will not power up unless connected to the backplane in a functional NI PXIe-1075 chassis.

## Power Cord

For 100–120 VAC installation, use gray power cords rated for 125 V/15 A, using the NI cable part numbers listed in the following table.

Country	NI Part Number
North America	763830-01
Japan	763841-01

## Connecting Safety Ground



**Caution** The power supply shuttle is designed with a three-position NEMA 5-15 (IEC 60320) jack that connects the ground line to the chassis ground. To minimize shock hazard, make sure the electrical power outlet you use to power the chassis has an appropriate earth safety ground.

If your power outlet does not have an appropriate ground connection, you must connect the premise safety ground to the chassis grounding screw. Refer to Figure 1 to locate the chassis grounding screw. To connect the safety ground, complete the following steps:

1. Connect a 16 AWG (1.3 mm) wire to the chassis grounding screw using a grounding lug. The wire must have green insulation with a yellow stripe or must be noninsulated (bare).
2. Attach the opposite end of the wire to permanent earth ground using toothed washers or a toothed lug.

# Specifications

---

## AC Input

Input voltage range.....	100 to 120 VAC, 220 to 240 VAC
Operating voltage range <sup>1</sup> .....	90 to 120 VAC, 200 to 264 VAC
Input current rating.....	12 A, 6 A
Input frequency .....	50/60 Hz
Over-current protection.....	15 A circuit breaker
Line regulation	
3.3 V.....	<±0.2%
5 V.....	<±0.1%
±12 V .....	<±0.1%
Efficiency .....	70% typical
Power disconnect .....	The AC power cable provides main power disconnect. The front-panel power switch causes the internal chassis power supply to provide DC power to the CompactPCI/PXI Express backplane. You also can use the rear-panel D-SUB 9-pin connector and power mode switch to control the internal chassis power supply. For more information, refer to the <i>Inhibit Mode Switch</i> section of Chapter 2, <i>Installation and Configuration</i> , in the <i>NI PXIe-1075 User Manual</i> .

---

<sup>1</sup> The operating range is guaranteed by design.

## DC Output

DC current capacity ( $I_{MP}$ )

Voltage	Maximum Current
+3.3 V	61 A
+5 V	56 A
+12 V	62 A
-12 V	4 A
5 V <sub>AUX</sub>	1.5 A



**Notes** Maximum total power is 791 W.

The maximum power dissipated in the system slot should not exceed 140 W.

Backplane pin current capacity

Slot	+5 V	V (I/O)	+3.3 V	+12 V	-12 V	5 V <sub>AUX</sub>
System Controller Slot	9 A	0 A	9 A	11 A	0 A	1 A
System Timing Slot	0 A	0 A	3 A	2 A	0 A	1 A
Hybrid Peripheral Slot with PXI-1 Peripheral	6 A	5 A	6 A	1 A	1 A	0 A
Hybrid Peripheral Slot with PXI-5 (PXI Express) Peripheral	0 A	0 A	3 A	2 A	0 A	1 A
PXI-1 Peripheral Slot	6 A	11 A	6 A	1 A	1 A	0 A

Load regulation

Voltage	Load Regulation
+3.3 V	<5%
+12 V	<5%
+5 V	<5%
-12 V	<5%

Maximum ripple and noise (20 MHz bandwidth)

Voltage	Maximum Ripple and Noise
+3.3 V	50 mV <sub>pp</sub>
+12 V	120 mV <sub>pp</sub>
+5 V	50 mV <sub>pp</sub>
-12 V	120 mV <sub>pp</sub>

Over-current protection..... All outputs protected from short circuit and overload with automatic recovery

Over-voltage protection  
3.3 V and 5 V ..... Clamped at 20 to 30% above nominal output voltage

Power supply shuttle MTTR ..... Replacement in under 5 minutes

## Where to Go for Support

---

The National Instruments Web site is your complete resource for technical support. At [ni.com/support](http://ni.com/support) you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

A Declaration of Conformity (DoC) is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting [ni.com/certification](http://ni.com/certification). If your product supports calibration, you can obtain the calibration certificate for your product at [ni.com/calibration](http://ni.com/calibration).

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at [ni.com/support](http://ni.com/support) and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0,  
Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599,  
Canada 800 433 3488, China 86 21 5050 9800,  
Czech Republic 420 224 235 774, Denmark 45 45 76 26 00,  
Finland 358 (0) 9 725 72511, France 01 57 66 24 24,  
Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737,  
Italy 39 02 41309277, Japan 0120-527196, Korea 82 02 3451 3400,  
Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710,  
Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466,  
New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60,  
Poland 48 22 3390150, Portugal 351 210 311 210, Russia 7 495 783 6851,  
Singapore 1800 226 5886, Slovenia 386 3 425 42 00,  
South Africa 27 0 11 805 8197, Spain 34 91 640 0085,  
Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151,  
Taiwan 886 02 2377 2222, Thailand 662 278 6777,  
Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the *Terms of Use* section on [ni.com/legal](http://ni.com/legal) for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or [ni.com/patents](http://ni.com/patents).